


DATASHEET

Infrared Receiver Module IRM-36xxJ7(GH) Series

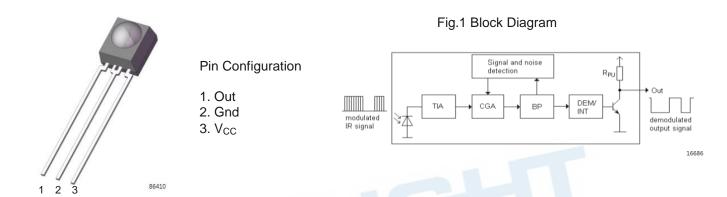

Features

- Circular lens for improved reception characteristics
- Available for various carrier frequencies
- Low operating voltage and low power consumption
- High immunity against lamp and TFT backlight noise
- Long reception range
- Pb free and RoHS compliant
- Compliance with EU REACH
- Compliance Halogen Free (Br < 900ppm, Cl < 900ppm, Br+Cl < 1500ppm)

Description

The IRM-36xxJ7(GH) devices are DIP type infrared receivers which have been developed and designed by using the latest IC technology, providing compatibility to most common IR protocols.

The PIN diode and preamplifier are assembled onto a lead frame and molded into a black epoxy package which operates as an IR filter. The demodulated output signal can directly be decoded by a microprocessor.

Applications

- AV equipment such as TV, VCR, DVD, CD, MD, etc.
- CATV set top boxes
- Multi-media Equipment
- Other devices using IR remote control



Part number table

Model No.	Carrier Frequency fc	
IRM-3636J7(GH)	36 kHz	
IRM-3638J7(GH)	38 kHz	
IRM-3640J7(GH)	40 kHz	

Absolute Maximum Ratings (T_a=25°C) (note1)

Parameter	Symbol	Rating	Unit
Supply Voltage	V _{cc}	0 ~ 6	V
Output current	lоит	0~2.5	mA
Operating Temperature	Topr	-20 ~ +80	°C
Storage Temperature	T _{stg}	-40 ~ +85	°C
Soldering Temperature (note2)	T _{sol}	260	°C

Electro-Optical Characteristics (T_a=25°C, V_{cc}=5V)

Parameter	Symbol	Min.	Тур.	Max.	Unit	Condition	
Current consumption	Icc		0.45	0.75	mA	No input signal	
Supply voltage	Vcc	4.5	-	5.5	V		
Peak wavelength	λρ		940		nm		
High level output voltage	V_{OH}	Vcc-0.3			V	Output open	
Low level output voltage	VoL		0.2	0.5	V	$I_{OUT} {\le} 2mA$	
Internal pull up resistor	R _{PU}		50		kΩ		
Max Reception range	L _{0max}	14				Test signal	
	L _{45max}	6			m	according to figure 2 Output pulse width: 400us <tl<800us 400us<th<800us<="" td=""></tl<800us>	
Min reception distance	L _{0min}			0.1			
Half angle(horizontal)	φ h		±35		deg		
Half angle(vertical)	φν		±35		deg		
Output low pulse	TL	400		800	us	See chapter test — method, L ₀ = 0.1m ~ 14m	
Output high pulse	Тн	400		800	us		

Note1: Absolute Maximum Ratings indicate limits beyond which damage to the device may occur.

Note2: 4mm from mold body for less than 5 seconds



Test method

The specified electro-optical characteristics are valid under the following conditions.

- 1. Measurement environment must be a place without extreme reflections
- 2. Transmitter radiant intensity $I_e = 80 \text{mW/sr}$
- 3. External lighting contains LED lighting with a color temperature of 6000K and illumination at the IR receiver is less than 100lux (Ev≤ 100Lux))
- 4. Test signal as shown below in figure 3

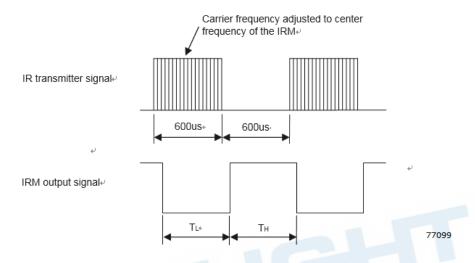


Fig.2 test signal and IRM output signal for reception distance and viewing angle test



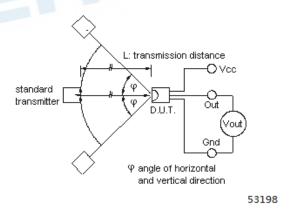



Fig.3 Measuring System





Typical Electro-Optical Characteristics Curves

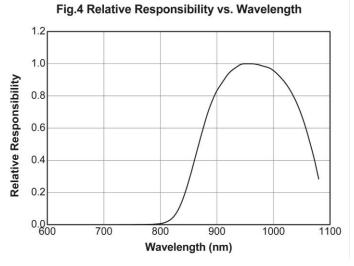

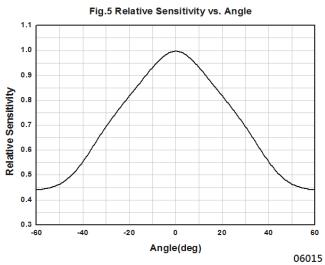

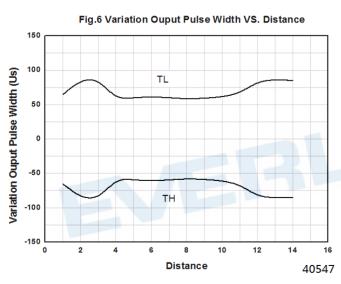

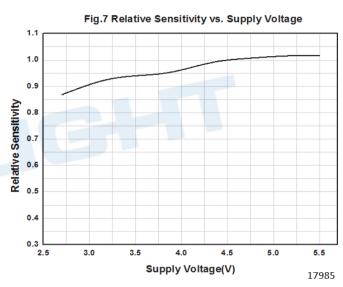

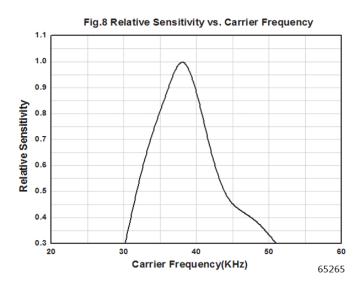



Application considerations

IRM IR receiver modules are high gain analog components to reach a long reception range. However, due to the high gain, they are also sensitive to noise from the power supply like $V_{\rm cc}$ ripple. Noise on the power supply can reduce the reception range of the IRM or cause output glitches and corrupted data. To protect the IRM receiver from power supply noise, a RC filter must be connected as close as possible to the $V_{\rm cc}$ and GND pins of the IRM. The circuit below in figure 9 shows the configuration of the RC filter and the required values. Ceramic or tantalum capacitor should be used, as standard electrolytic capacitors are only suitable for low frequencies and might not be able to filter noise in the frequency range of the IRM. The IRM receiver is most sensitive to noise which is at the carrier frequency or close to the carrier frequency. When using a switching mode power supply, the switching frequency must not be the same as the carrier frequency of the IRM. A gap of at least 20kHz between the switching frequency of the power supply and the IRM carrier frequency is recommended.

If the trace from the IRM output pin to the decoder IC on the PCB is long, the parasitic capacitance might be high causing slow rise times of the IRM output signal. In such case, an additional pull up resistor of 10kOhm or higher can be added at the IRM output to reduce the influence of parasitic trace capacitance.

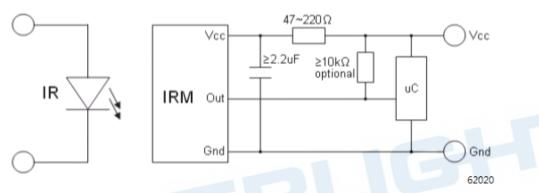


Fig.9: application circuit

Code compatibility

The IRM-36xxJ7(GH) receiver modules are mainly designed for remote control applications which require very high noise immunity. Hence the IR code compatibility is matched for the most common IR protocols. To guarantee a proper data signal reception, a few points need to be taken into consideration.

The signal transmission must be carried out in data packages with limited length followed by a data pause time of a certain length. Continuous data transmission is not applicable as such kind of signal will be judged as noise and suppressed after a short time. Table1 below shows the compatibility to most commonly used IR protocols. If an IR protocol is not listed in this table, the compatibility needs to be checked according to the burst times, gap times, data package length and data pause time. The required limits for these items are shown in table 2 "acceptable IR signal timings".

Protocol	Suitable	Protocol	Suitable	Protocol	Suitable
NEC	Yes	Sony 12 Bit	Yes	TCL	Yes
Toshiba	Yes	Sony 15 Bit	Yes	Thomson	Yes
RC5	Yes	Sony 20 Bit	Yes	Continuous	Yes
RC6	Yes	RCA	Yes	RCMM	No

Table 1: IR protocol compatibility

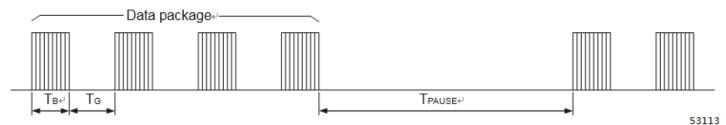


Fig.10: general IR data structure

	IRM-3636J7(GH) IRM-3638J7(GH) IRM-3640J7(GH)
Min burst length T _B	300us
Min gap length T _G	350us


Table 2: acceptable IR timings

Operation under noisy environment

The IRM-36xxJ7(GH) receiver modules are designed for high light noise immunity, especially for noise from fluorescent and energy saving lamps and noise from TFT TVs with CCFL backlight. The receiver is able to suppress most optical noise, but the presence of any kind of optical noise will cause shorter reception range because the AGC will reduce the gain to suppress the noise.

The presence of noise can also affect the output pulse jitter. In such case, the output pulse jitter shown in the electro-optical specification above, might not be valid anymore and bigger pulse jitter can occur. This behavior needs to be considered when tuning the timing limits of the decoder. It is recommended to use the output pulse variation shown in the electro-optical specifications above as a base to set the timing limits of the decoder. However, due to different protocols and environmental conditions, other timing limits might result in better performance and decoding security. This needs to be verified for the specific application by testing under different noise conditions.

Device Marking

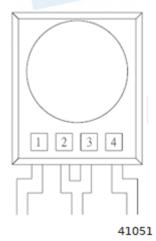


Notes

- 1 denotes Year code
- 2 denotes Month code
- 3 denotes Device number
- 4 denotes Carrier frequency



Package Dimension

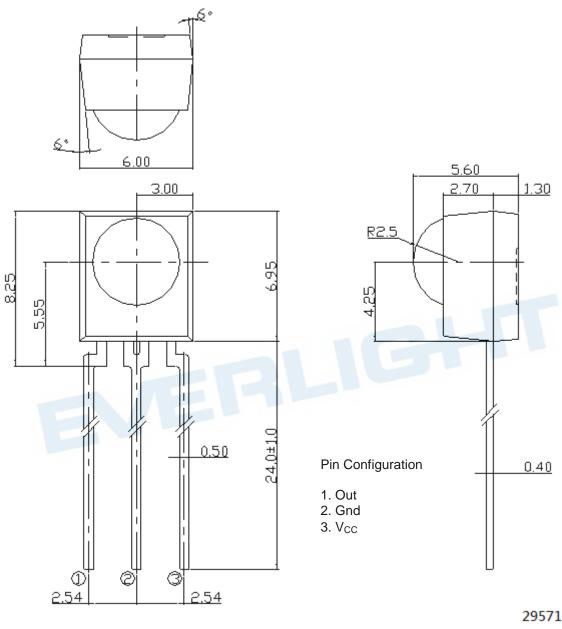

Notes:

- 1. Tolerances unless mentioned ±0.5mm. Unit: mm
- 2. Dimensions in mm

Packing Quantity

250 pcs / Bag 6 Bags / 1Box 10 Boxes / Carton



Application Restrictions

- 1. EVERLIGHT reserves the right(s) on the adjustment of product material mix for the specification.
- 2. The product meets EVERLIGHT published specification for a period of twelve (12) months from date of shipment.
- 3. The graphs shown in this datasheet are representing typical data only and do not show guaranteed values.
- 4. When using this product, please observe the absolute maximum ratings and the instructions for using outlined in these specification sheets. EVERLIGHT assumes no responsibility for any damage resulting from the use of the product which does not comply with the absolute maximum ratings and the instructions included in these specification sheets.
- 5. These specification sheets include materials protected under copyright of EVERLIGHT. Reproduction in any form is prohibited without obtaining EVERLIGHT's prior consent.
- 6. This product is not intended to be used for military, aircraft, automotive, medical, life sustaining or life saving applications or any other application which can result in human injury or death. Please contact authorized Everlight sales agent for special application request.

